





## Fenix CL26R Pro Camping Lantern

### Technical Parameters

	High	Med	Low	Front	Down 1	Down 2	Down 3	Red Light	Red Flash
 <b>Output</b>	500 lumens	200 lumens	50 lumens	25 lumens	5 lumens	50 lumens	150 lumens	3 lumens	3 lumens
 <b>Runtime</b>	10 hours	13 hours	40 hours	67 hours	408 hours	58 hours	15 hours	125 hours	240 hours
<b>Beam Diameter</b>	15 meters								
 <b>Impact Resistance</b>	1 meter								
 <b>Waterproof of</b>	IP66								

Note: The above specifications are the test results produced by Fenix through its laboratory testing using the Fenix ARB-L21-5000 V2.0 battery under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery used.

\*The High output is measured in total of runtime including output at reduced levels due to the built-in temperature protection mechanism.

### Warning

- ©DO place this lantern out of the reach of children!
- ©Do NOT shine the lantern directly into the eyes of anyone!
- ©Do NOT place light head near flammable objects as high temperatures can cause objects to overheat and become flammable/ignite!
- ©Do NOT use the lantern in inappropriate ways such as holding the unit in your mouth. If the battery were to fail while doing so death or serious injury could result.
- ©This lantern will accumulate a lot of heat while operating, resulting in a high temperature of the lantern outer case. Pay close attention to the thermal condition of the lantern to avoid burns.
- ©Remove the battery from the lantern to prevent accidental activation when the lantern is

placed in a closed-in and flammable environment such as pockets and backpacks!

ⓄThe LED of this lantern is not replaceable; so the whole lantern will need to be replaced when the LED reaches the end of its lifespan.

## **Product features**

Ⓞ650 lumens maximum combined output, 15 meters maximum beam diameter.

ⓄUses seven groups of high-quality LEDs; with a lifespan of 50,000 hours.

ⓄPowered by a single Fenix ARB-L21-5000 V2.0 battery. The Fenix ARB-L18 series battery can also be used when combined with the ALF-18 battery holder.

ⓄRotary toggle switch and an electronic switch for fast and convenient operation.

ⓄMagnetic top for easy light mounting and hands-free use.

ⓄMultiple lighting combinations for various lighting needs inside the tent or outside the campsite.

ⓄSturdy retractable hook is perfect for hanging the lantern in your tent or any other area that needs overhead light.

ⓄWhite and red light sources.

ⓄUniversal USB Type-C charging port for fast and convenient charging.

ⓄUSB Type-A discharging port, the lantern can be used as a power bank.

ⓄSize: 2.60" × 2.34" × 4.49"/66 × 59.5 × 114 mm.

ⓄWeight: 7.02 oz/199 g (excluding battery).

## **Operating Instructions**

### **On/off**

With the lantern switched off, rotate the toggle switch to any output to turn on the lantern or press and hold the switch to turn on the lantern.

With the lantern switched on, rotate the toggle switch to "⏻" to turn off the lantern or press and hold the switch to turn off the lantern.

### **Mode switching**

Mode A is 360° all-around light mode, Mode B is Down light mode.

With the lantern switched off, rotate the toggle switch clockwise to turn on the lantern and enter Mode A.

With the lantern switched off, rotate the toggle switch counterclockwise to turn on the lantern and enter Mode B.

With the lantern switched off, press and hold the switch for 0.5 seconds to enter the Red light mode, press and hold the switch for 0.5 seconds again to exit the Red light mode and turn off the lantern.

Mode A and Mode B combined lighting:

In Mode A, press and hold the switch for 0.5 seconds to simultaneously enter Mode B. Press and hold the switch for 0.5 seconds again to exit Mode B.

In Mode B, press and hold the switch for 0.5 seconds to simultaneously enter Mode A. Press and hold the switch for 0.5 seconds again to exit Mode A.

### Output Selection

Mode A: Rotate the toggle switch clockwise to select Front→Low→Med→High.

Mode B: Rotate the toggle switch counterclockwise to select Down 1→Down 2→Down 3.

Mode A and Mode B combined lighting:

In Mode A, simultaneously enter Mode B and single click the switch to cycle through Down 1→Down 2→Down 3(Mode A output remains the same).

In Mode B, simultaneously enter Mode A and single click the switch to cycle through Front→Low→Med→High(Mode B output remains the same).

In Red light mode, single click the switch to select between Red light and Red flash.

### Battery Specifications

Type	Dimensions	Nominal Voltage	Usability	
Fenix ARB-L21-5000 series	21700	3.6 V	Recommended	✓✓
Fenix ARB-L18 series	18650	3.6 V	Usable	✓
Rechargeable battery (Li-ion)	21700	3.6 V	Caution**	!
Rechargeable battery (Li-ion)	18650	3.6 V	Banned	⊠ ×

Warning:

\*The Fenix ARB-L18 series battery must be combined with a Fenix ALF-18 battery holder while using.

\*\*21700 Li-ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Only using quality batteries with circuit protection will reduce the potential for combustion or explosion; cell damage or short circuiting are

considered user induced damage and are not covered by any Fenix warranty or liability.

## **Battery Replacement**

Unscrew the top cap and insert the battery with the anode side (+) towards the down light end, then screw the light cap back on.

## **Charging**

1. Open the anti-dust cover to reveal the charging port, plug the USB-A end of the charging cable into an electrical outlet, then connect the USB Type-C end of the charging cable to the lantern.
2. When charging, the charging indicators will flash from left to right to display charging status.
3. All four indicators will be constant-on after charging is complete.

Note:

1. Only Front, Low(25 lumens maximum), Down 1, Down 2(25 lumens maximum), Red light, Red flash outputs can be operated while charging.
2. Be sure to close the anti-dust cover once charging is completed.
3. The normal charging time is about 3.5 hours from fully depleted to fully charged with the light off.
4. Mode A and Mode B cannot be operated simultaneously while charging.

## **Power Bank Function**

1. Open the anti-dust cover to reveal the discharging port, insert the USB Type-A end of the charging cable into the USB discharging port of lantern, then connect the USB Type-C end of the charging cable to the USB Type-C port of the digital device to be charged.
2. Turning the lantern on will automatically start charging your digital device. The LED indicators will recede from right to left to indicate the discharging status.
3. With the lantern switched off, either single click the switch, rotate the toggle switch, or press and hold the switch to activate the lantern for device charging.
4. If the battery voltage is lower than 3.0 V, the lantern will stop discharging automatically.

Note:

1. High output is not available while discharging. If the user selects the High output setting, the lantern will automatically shift to Med output.
2. Mode A and mode B cannot be operated simultaneously while discharging.

## **Battery level indication**

Each time the light is turned on, the indicator(s) will indicate the battery level and will last for 5 seconds. With the light switched off, single click the switch to check the battery status. The battery level indicator(s) will display the battery status for 5 seconds.

Four lights on: 100% - 80%

Three lights on: 80% - 60%

Two lights on: 60% - 40%  
One light on: 40% - 20%  
One light flashes: 20%-1%

Note: This feature only works with the Fenix ARB-L21-5000 V2.0 battery.

## **Intelligent Overheat Protection**

The lantern will accumulate a lot of heat when used at high output levels for extended periods. When the lantern reaches a temperature of 48° C/118° F or above, the lantern will automatically step down a few lumens every 0.5 seconds to reduce the temperature. When the temperature drops below 46° C/115° F, the lantern automatically recalls the previously used output level.

## **Low-voltage Warning**

When the voltage level drops below the preset level, one indicator flashes to remind you to recharge the battery. To ensure normal use, the lantern will not turn off automatically and will work till the battery runs out.

## **Usage and Maintenance**

- ©Disassembling the sealed head can cause damage to the lantern and will void the warranty.
- ©Keep the lantern fully charged to ensure that all functions are available at any time in the future.
- ©Fenix recommends using an excellent quality battery.
- ©If the lantern will not be used for an extended period, remove the battery, or the lantern could be damaged by electrolyte leakage or battery explosion.
- ©Recharge a stored lantern every three months to maintain optimum performance of the battery.
- ©Periodic cleaning of the battery contacts improves the lantern's performance as dirty contacts may cause the lantern to flicker, shine intermittently or even fail to illuminate for the following reasons:
  - A: Poor battery level.  
Solution: Replace or recharge the battery (Ensure the battery is inserted according to the manufacturer's specifications).
  - B: The threads, PCB board contact or other contacts are dirty.

Solution: Clean the contact points with a cotton swab soaked in rubbing alcohol.

If the above methods don't work, please contact your authorized distributor.

## **Included**

Fenix CL26R Pro camping lantern, ARB-L21-5000 V2.0 battery, USB Type-C charging cable, Spare O-ring, User manual, Warranty card