

61.133.291.112-HM65R 说明书-多国语言说明书

105G铜版纸/单黑双面印刷/风琴折4折再4折225*392mm/A5



(English)Fenix HM65R Headlamp

- Spot and Floodlight for various lighting demands.
- One Cree white and neutral white LED, with a lifespan of 50,000 hours.
- Powered by one 18650 rechargeable Li-ion battery or two 3V/CR123A batteries
- Constant current circuit guarantees longer runtime
- Dual top switches for easy and fast operation
- Type-C charging, 1.5A large current
- Quality aluminum, magnesium and PC material, lightweight and durable
- Use of ultra-clear glass lens with an anti-reflective coating
- 3.17" x 2.17" x 1.57" (80.5 x 55 x 40 mm)
- 3.42 oz / 97 grams (excluding battery)

Operating Instruction ①

Switches
Spotlight for on/off, mode switching, lockout function and output selection on spotlight mode.
Floodlight for on/off, mode switching, lockout function and output selection on floodlight mode.

On/Off
Press and hold either of the two switches for 0.5 seconds to turn on/off the lamp. The output level is set by default for first use. Afterwards, the light remembers the last selected output, when turned on again the previously used output will be recalled.

Mode switching
Press and hold either of the two switches for 0.5 seconds to reach the corresponding mode.


Output selection
Spotlight mode: For the first use, click the spotlight switch to cycle through Med→High→Turbo→Low. Afterwards, the light memorizes the last selected output.

Floodlight mode: For the first use, single click the floodlight switch to cycle through Med→High→Low. Afterwards, the light memorizes the last selected output.

Lockout Function
Lock: With the lamp switched off, press and hold either of the two switches, or simultaneously press the two switches for 3 seconds, the lamp will blink 4 times of Low of floodlight mode to indicate locked status.

Unlock: With the lamp switched off, simultaneously press the two switches for 3 seconds, the lamp will be activated with 4 one-second beeps and activates on Low of floodlight mode.

In locked status, clicking or pressing the switches will activate 4 one-second beeps to indicate locked status.

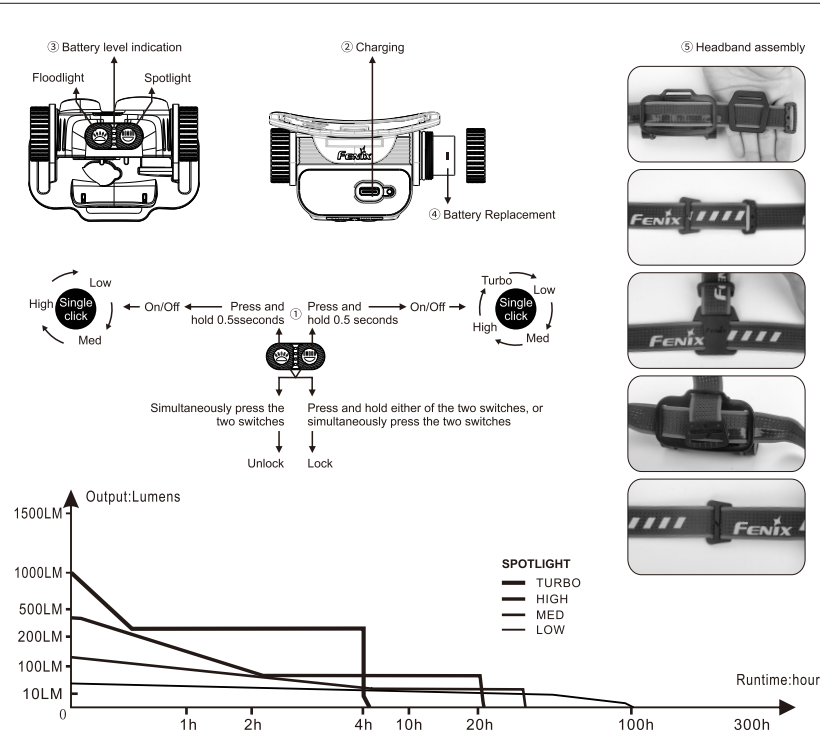

Specifications

ANSI/PLATO FL1	TURBO	HIGH	MED	LOW	HIGH	MED	LOW
2% OUTPUT	1000 lumens	400 lumens	130 lumens	50 lumens	400 lumens	130 lumens	8 lumens
④ RUNTIME	4 hours	22 hours	42 hours	97 hours	21 hours	50 hours	300 hours
④ DISTANCE	163 meters	101 meters	57 meters	37 meters	55 meters	30 meters	6 meters
④ INTENSITY	6,677 candela	2,600 candela	833 candela	350 candela	762 candela	220 candela	9 candela
④ RESISTANCE TO IMPACTS	IP68, 2 meters underwater						
④ WATERPROOF	IP68, 2 meters underwater						

▲ Test condition: User one Fenix ARB-L18-3500 rechargeable Li-ion battery at a temperature of 21±3°C with the humidity between 50% - 80%.
The runtime of turbo is the cumulative time when overheat protection active.

Charging ②

Operation
1. Uncover the anti-dust cap and plug the USB Type-C side of the charging cable into the charging port of the lamp.
2. The normal charging time of the Fenix ARB-L18-3500 rechargeable Li-ion battery is about 3 hours with the lamp being switched off. When charging, Med output of spotlight or floodlight mode can be separately selected. The light will not be automatically powered on after full charging.
3. When charging process, one indicator flashes: below 20%, one constant-on and one flashes 21%-50%, two constant-on and one flashes 51%-80%, three constant-on and one flashes 81%-95%, four constant-on and one flashes 96%-100%.

Replace the anti-dust cap to ensure waterproof and dustproof ability

Mode switching
Press and hold either of the two switches for 0.5 seconds to reach the corresponding mode.

Output selection
Spotlight mode: For the first use, click the spotlight switch to cycle through Med→High→Turbo→Low. Afterwards, the light memorizes the last selected output.

Floodlight mode: For the first use, single click the floodlight switch to cycle through Med→High→Low. Afterwards, the light memorizes the last selected output.

Lockout Function
Lock: With the lamp switched off, press and hold either of the two switches, or simultaneously press the two switches for 3 seconds, the lamp will blink 4 times of Low of floodlight mode to indicate locked status.

Unlock: With the lamp switched off, simultaneously press the two switches for 3 seconds, the lamp will be activated with 4 one-second beeps and activates on Low of floodlight mode.

In locked status, clicking or pressing the switches will activate 4 one-second beeps to indicate locked status.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.



Usage and Maintenance

- Disassembling the sealed head can cause damage to the lamp and will void the warranty.
- Use Fenix recommends using an excellent quality Fenix 18650 battery.
- The lamp will not be used for an extended period, remove the battery, or the lamp could be damaged by electrolyte leakage.
- Long-term use can result in an O-ring tear. To maintain a proper water seal, replace the ring with an approved spare.
- Periodic cleaning of the battery contacts improves the lamp's performance as dirty contacts may cause the lamp to flicker, shine intermittently or even fail to illuminate for the following reasons:
 - A. The battery needs replacing.
 - B. Replace battery. Ensure battery is inserted according to the manufacturer's specifications.
 - C. The threads, PCB board contact or other contacts are dirty.
 - Solution: Clean the contact points with a cotton swab soaked in rubbing alcohol.
- If the above methods do not work, please contact the distributor.

Included
Fenix ARB-L18-3500 rechargeable Li-ion battery, Headband, Top headband, Headband mount, Spare O-ring, Charging cable, User manual, Warranty card

Warning
The headlamp is a high-intensity lighting device capable of causing eye damage to the user or others. Avoid shining the lamp directly into anyone's eyes.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.


Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

WARNING
Uncover the battery cover anticlockwise to insert the battery with the anode side (+) towards the left, then screw the battery back on.

Low Voltage Warning
When the battery level is detected critical for currently used output, one of the indicator will flash to remind. Replace the battery or recharge the lamp as soon as possible.

Headband Assembly ③
Notice: The headband is factory assembled by default.
1. Attach the headband to the headlamp as shown (Pic.1), by first sliding the band down to the bottom of the slots. Then hook the top edge under the top slot.
2. Adjust the headband by sliding the buckle to required length.
3. Assemble top headband to better fix the headlamp. Fix first the bottom headband to the headband, then fix the side of the top headband mount to the headband holder, and the other end of the top headband mount.

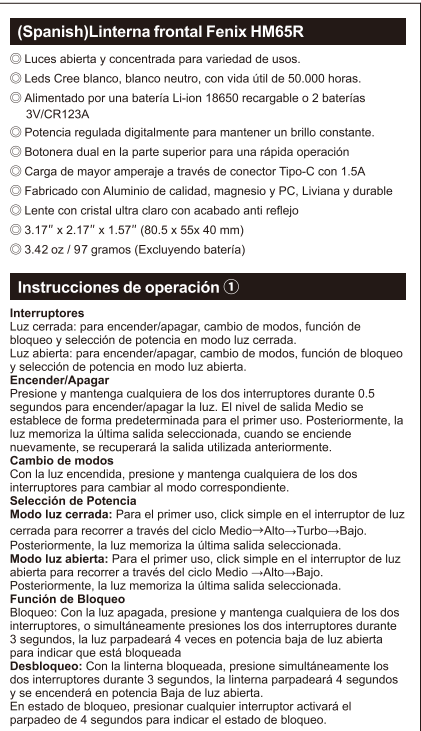

(German)Fenix HM65R Stirnlampe

- Spot- und Flutlicht für fast alle Beleuchtungssituationen.
- weiße Cree- und neutralweiße LEDs mit 50.000 Stunden Lebensdauer.
- Betrieb mit einer 18650 Li-Ion-Akku oder 3 Stück CR123A Lithium-Batterien
- Konstantstromschaltung für weitgehend gleichbleibende Helligkeit
- 2 Schalter für ein-/ausgeschaltetes Licht
- Ein Lade-USB Typ-C mit 1,5 A Ladestrom
- Gefertigt aus hochwertigem Aluminium-, Magnesium- und Kunststoffwerkstoffen, leicht und haltbar
- gehärtete ultra klare Linse mit Anti-Reflex-Beschichtung
- 8,1 cm Länge x 5,5 cm Breite x 4,0 cm Höhe
- 97 Gramm ohne Akku

Bedienung ①
Die beiden Schalter für das Spot- und Flutlicht befinden sich über der jeweiligen LED und arbeiten voneinander unabhängig.

Ein- und ausschalten
Drücken und halten Sie den jeweiligen Schalter für 0,5 Sekunden, um das Spot- bzw. Flutlicht ein- bzw. auszuschalten. Es wird automatisch die jeweils zuletzt genutzte Helligkeitsstufe angewählt.

Wechsel zwischen Spot- und Flutlicht
Drücken Sie bei einer eingeschalteten LED den jeweils anderen Schalter für 0,5 Sekunden, um in zur anderen LED zu wechseln.

Wahl der Helligkeitsstufe
Drücken Sie den jeweiligen Schalter kurz, um endlos zu wechseln zwischen: Spotlicht, Dunkel – Mittel – Hell – Turbo

Spotlicht, Dunkel – Mittel – Hell – Turbo
Spotlicht, Dunkel – Mittel – Hell

Bedienungsprinzip
Sperren: Drücken Sie bei ausgeschaltetem HM65R einen von beiden Schaltern oder beide gleichzeitig für 3 Sekunden, die HM65R wird dann 4 mal blinken, um die Aktivierung der Bedienungsprinzip zu bestätigen.

Entsperren: Drücken Sie beide Schalter gleichzeitig für 3 Sekunden, um zu entsperren. Die HM65R wird dann 4 mal blinken und danach in der Stufe Dunkel des Flutlicht leuchten.

WARNING
Wenn im gesperrten Zustand einer der Schalter gedrückt wird, so wird die HM65R 4 mal blinken, um die aktivierte Bedienungsprinzip zu erinnern.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.


Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

Bedienungsprinzip
Aktivieren Sie bei der Lagerung und dem Transport immer die Sperre, um ein versehentliches Einschalten zu vermeiden. Da die HM65R, insbesondere im Turbomodus, sehr heiß werden könnte, so ein Brand entstehen.

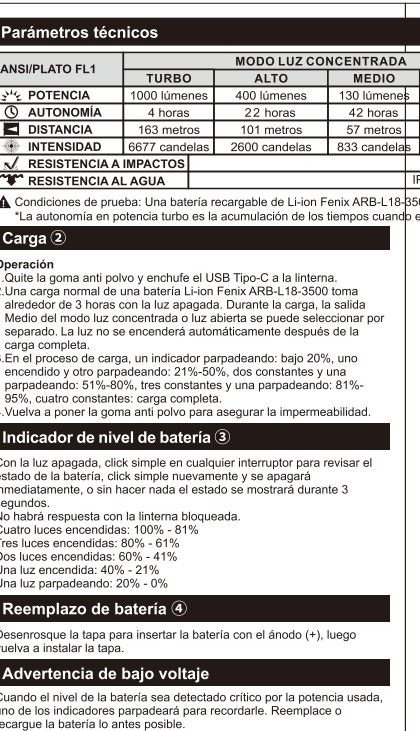

Technische Daten

ANSI/PLATO FL1	TURBO	HELL	SPOTLIGHT	DUNKEL	HELL	FLUTLICHT	DUNKEL
④ HELLHEITKEIT	1000 Lumen	400 Lumen	130 Lumen	50 Lumen	400 Lumen	130 Lumen	8 Lumen
④ RUNTIME	4 Stunden	22 Stunden	42 Stunden	97 Stunden	21 Stunden	50 Stunden	300 Stunden
④ DISTANZ	163 Meter	101 Meter	57 Meter	37 Meter	55 Meter	30 Meter	6 Meter
④ INTENSITÄT	6677 Candela	2600 Candela	833 Candela	350 Candela	762 Candela	220 Candela	9 Candela
④ RESISTENZGEGENSTöße	IP68, 2 Meter Unterwasser						
④ WASSERDICHTHEIT	IP68, 2 Meter Unterwasser						

▲ Test condition: Ein Fenix ARB-L18-3500 Akku bei 21±3 °C mit 50% - 80% relativer Luftfeuchtigkeit. Die Brenndauer kann je nach verwendeter Leuchte, Akku / Batterien und deren Alter abweichen.

Die Laufzeitangaben in der Helligkeitsstufe Turbo ist aufgrund des Überhitzungsschutzes zu akkumulierter Wert.

LEDen konstant an: 60% - 41%
1 LED konstant an: 40% - 21%
2 LEDs konstant an: 20% - 10%

Zur Verwendung erlaubte Akkus und Batterien
Typ Typ Größe Spannung Nutzbarkeit

FENIX ARB-L18 18650 3.6V Neuzubau

geprüfte Li-Ion 18650 3.6 V/3.7 V Zulässig

Li-Ion-Batterien CR123A 3V Nutzbar (NIE aufladen!)

Li-Ion-Akkus 16340 3.6 V/3.7 V verboten

LiFePO4-Akkus 16340 3.2V verboten

LiFePO4-Akkus 18650 3.2V verboten

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 100% - 81%
2 LEDs blinken: 80% - 61%
3 LEDs blinken: 60% - 41%

Kapazitätsanzeige ③
Drücken Sie einen von beiden Schaltern bei ausgeschaltetem HM65R für 3 Sekunden, um die Kapazität des Akkus zu prüfen.

Drücken Sie während der 3 Sekunden erneut einen Schalter, so wird der Akkustatus angezeigt:

1 LED blinkt: 1